


11. EXPLODED DIAGRAM : MLG-70

⚠ WARNING

This diagram is for your reference only. Do not attempt to service or repair the Tool.
 Do not take the Tool apart. Contact an authorized Nitto dealer for all service and repair of the Tool.
 Improper service and repair can cause accidents and service injuries.
 Never attempt to modify the Tool.
 Never attempt service or repair the Tool yourself.

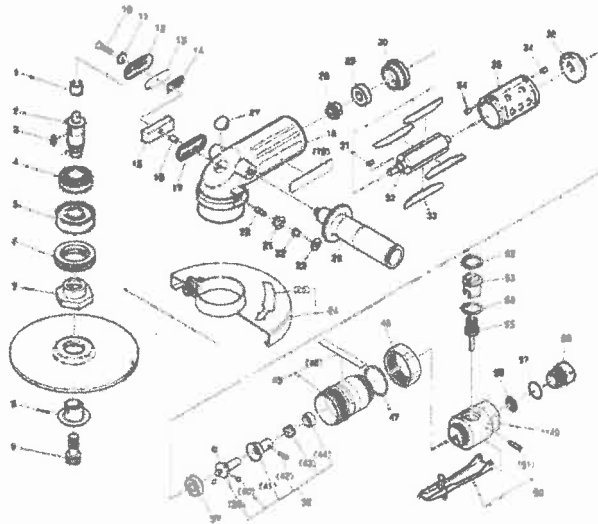

The part numbers with () are included in the Ass'y parts written above them.

No.	PartsNo.	Description	Qty
1	TQ12088	Needle Bearing BK1012	1
2	TQ12546	Spindle	1
3	TP09933	Parallel Key Both Ends Round 4X4X12	1
4	TQ12547	Gear	1
5	TP04138	Ball Bearing 6204ZZ	1
6	TB08263	Bearing Set Screw Ass'y	1set
7	TQ00772	Lock Plate	1
8	TQ00771	Disk Lock	1
9	TP11688	Hex. Socket Head Cap Screw 12X25	1
10	TQ12330	Raised Countersunk Head Screw 4X20	1
11	TQ12647	Toothed Washer CW-4	1
12	TQ12076	Exhaust Cover	1
13	TQ12570	Filter Support	1
14	TQ12541	Silencer Plate	1
15	TQ12540	Exhaust Filter	1
16	TQ12109	Spacer 5X6X11.8	1
17	TQ12559	Packing Cover	1
18	TB08606 (TQ12663)	Housing SUB Ass'y TB08793	1set
19	(TQ12663)	Label Warning CE Marking	1
20	TQ12542	Lock Pin	1
21	TQ12537	Pin Guide	1
22	TQ12544	Conical Spring 0.6X7.2X8.8X8	1
23	TQ12543	Lock Button	1
27	TQ12571	Plug	1
28	TQ12070	Pinion	1
29	TQ12087	Ball Bearing 638ZZ	1
30	TQ12064	EndPlate B	1
31	TP10130	Parallel Key Both Ends Round 3X3X10	1
32	TQ12061	Rotor	1
33	TB08555	Blade Ass'y	1set
34	TP04061	SpringPin 3X 6 AW	2

No.	PartsNo.	Description	Qty
35	TQ12082	Cylinder	1
36	TQ12063	EndPlate A	1
37	TP06242	Ball Bearing 629ZZ	1
38	TB08258	Governor Ass'y	1set
39	(TQ12066)	Base	1
40	(TP01566)	Ball $\phi 6$	3
41	(TQ12067)	Sleeve	1
42	(TQ12090)	Needle Roller 2.5X13.8	1
43	(TQ12069)	Spring 1.4X15.5X15.5	1
44	(TQ12068)	Stopper	1
45	TB08668	Valve Holder Ass'y	1set
46	(TQ12750)	Label Model	1
47	TP17445	O-ring S-35.5	1
48	TP17452	Lock Ring	1
49	TQ12662	Valve Body	1
50	TB08669	Lever Ass'y	1set
51	(TP13893)	SpringPin 3X30AW	1
52	TP10448	Internal Retaining Ring C-24	1
53	TQ12668	Adjust Valve	1
54	TP10714	O-ring S-22	1
55	TA96331	Valve Stem Ass'y	1set
56	TP01658	Filter	1
57	CP25821	O-ring JASO-1020	1
58	TQ12671	Bushing M22XRc3/8	1

Accessories

No.	PartsNo.	Description	Qty
24	TB08757	Wheel guard Ass'y	1set
25	(TQ12640)	Label Warning Wheel guard	1
26	TB08265	Handle Ass'y	1set
	TP00170	Hex. Socket Screw Key 6	1
	TP11723	Hex. Socket Screw Key 10	1
	TQ02350	Bushing R3/8XNPT3/8	1
	TQ12673	Instruction Manual	1